 


SMART REMOTE

USER GUIDE



LAYOUT

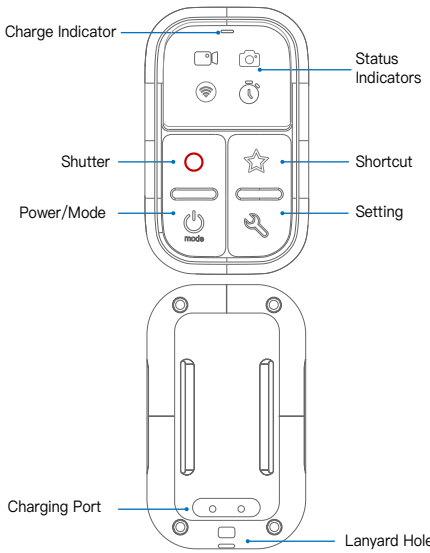

STATUS INDICATION

- Connection** On: Connected to cameras
Blinking: Searching for cameras
- Video** On: Cameras in Video Mode
Blinking: Recording video
- Photo** On: Cameras in Photo Mode
Blinking: Taking Photo
- Timelapse** On: Cameras in Timelapse Mode
Blinking: Recording Timelapse

BUTTONS

- Power /Mode Button** **Power on:** Press and hold for 1 second to turn on
Power off: Press and hold for 3 seconds to turn off
Switching modes: Press **Power button** one time, the cameras will switch to next mode.
During recording , press the **Power button** to mark a **HiLight tag**.

- Shutter Button** Press **Shutter button** to start/stop recording a video or taking a photo.
- Shortcut Button** Press and hold **Shortcut button** for 3 seconds to set current sub-mode as Shortcut sub-mode.
After that, press **Shortcut button** will immediately jump to this Shortcut sub-mode.
- Setting Button** When the **Setting button** is pressed, the camera will switch among all sub-modes of the current main mode in turn.

PAIRING CAMERA

- Press and hold **Setting Button** for 3 seconds to enter the pairing mode. All indicators will blink.
- Set your camera to pairing mode: **Connections>Connect Device>Remote**
- Wait for the pairing success notification on the camera. Press **Setting Button** to exit pairing mode.

- If the pairing fails, select Reset Connections in camera's settings and conduct the above operations again.
- The paired cameras and remote will connect automatically when they are powered on.
- After a long period of power off, the camera may completely shut down the wireless connection. You need to remove the camera battery, put it back and turn on the power to activate the wireless.
- To control multiple cameras at the same time, refer to the "FIRMWARE UPDATE" instructions, enter the Opitons and turn on the Multiple Cameras Mode.

CHARGING

Attach the magnetic charging cable to charging port on the back of remote. Cell phone USB charger is required. The charging indicator will turn on When charging and turn off when battery is fully charged.

POWER INDICATION

When powering on, the Status indicators will use to indicate the power level. Each indicator represents 25% power, and how many indicators are on indicates how much power there is.

When the remote battery is almost exhausted, the Connection Indicator will blink three times for notification.

FIRMWARE UPDATE

- When the new camera is launched, we may update the firmware. Please visit www.yoctop.com/downloads to download firmware.
- Power off the remote,press and hold **Setting Button** and turn on remote to enter the Opitons mode. All indicators will be on.
- Connect the Wi-Fi hotspot SSID HERO-RC-XXXXXX with your computer or Android phone.
- Open <http://192.168.4.1> in your web browser.
- Click **Choose File** to select the Firmware file. Click **Update** button and wait for remote to finish update.

YOCTOP

More infomation:
WWW.YOCTOP.COM
or send email to
customerservice@yoctop.com